


HOSHIZAKI

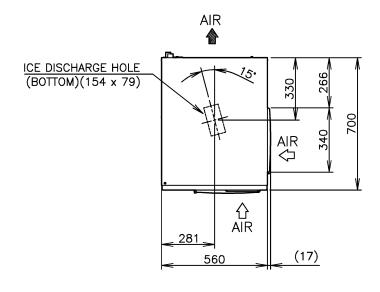

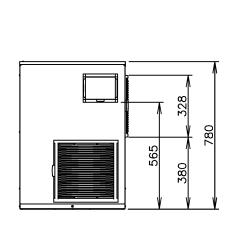

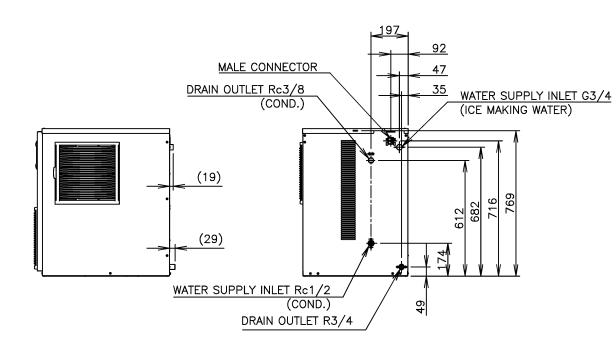

	ITEM	HOSHIZAKI NUGGET ICE MAKER
/2\	MODEL	FM-480AWKE-N(-SB)
	POWER SUPPLY	1 Phase 220—240V 50Hz Capacity: 2.7kVA (11.7A)
	AMPERAGE	7.1A Starting: 43A
	ELECTRIC CONSUMPTION	1450W (Power Factor: 88%)
	ICE PRODUCTION PER 24h	Approx.380kg (Ambient Temp. 10°C, Water Temp. 10°C) Approx.350kg (Ambient Temp. 21°C, Water Temp. 15°C) Approx.320kg (Ambient Temp. 32°C, Water Temp. 21°C)
<u>/2</u>	POTABLE WATER CONSUMPTION PER 24h	Approx. 0.38m³ (AT. 10°C, WT. 10°C) Approx. 0.35m³ (AT. 21°C, WT. 15°C) Approx. 0.32m³ (AT. 32°C, WT. 21°C)
<u>^</u> 2	CONDENSER WATER CONSUMPTION PER 24h	Approx. 1.180m³ (AT. 10°C, WT. 10°C) Approx. 1.652m³ (AT. 21°C, WT. 15°C) Approx. 2.440m³ (AT. 32°C, WT. 21°C)
	SHAPE OF ICE	Nugget
	MAX STORAGE CAPACITY	Not Applicable
	OUTSIDE DIMENSIONS	560(W) x 700(D) x 780mm(H)
	CABINET	Stainless Steel, Galvanized Steel (Rear)
	ICE MAKING SYSTEM	Thin ice forming inside Cylinder (Nugget Ice)
	WATER SUPPLY SYSTEM	Direct Connection to Water Main, Inlet: G3/4, Cond.Inlet: Rc1/2 (Rear)
	DRAIN SYSTEM	Outlet: R3/4 , Cond.Outlet Rc3/8 (Rear)
	COMPRESSOR	Hermetic
	CONDENSER	Tube in Tube Type, Water—cooled
	EVAPORATOR	Tube coiled around Cylinder (Solder Plated)
<u>/2</u>	REFRIGERANT	R404A/370g
	BIN CONTROL	Actuator and Reed Switch (Time delay controlled)
	ICE MAKING WATER CONTROL	Float Switch and Solenoid Valve
	ELECTRIC CIRCUIT PROTECTION	Circuit Breaker, Earth Wire
	REFRIGERANT CIRCUIT PROTECTION	Compressor Internal Thermostat (Auto-reset), Pressure Switch (Auto-reset
	MECHANISM PROTECTION	Microswitch (Manual-reset)
<u>^</u> 2	ICE MAKER PROTECTION	Shutdown by Microprocessor (Manual—reset)
	WEIGHT	Net: 95kg(Gross: 102kg)
	PACKAGE	Carton 665(W) x 820(D) x 950mm(H)
	ACCESSORIES	Mounting Bracket, Installation Kit
	OPERATING CONDITIONS	Ambient Temp.: 5 - 40°C, Water Supply Temp.: 5-35°C Water Supply Pressure: 0.05-0.8MPa(0.5-8bar) Voltage Range: Rated Voltage±10%
:	*We reserve the right t	o make changes in specifications and design without prior notice.

- 1. Install the ice maker properly in accordance with the instructions on location, water supply/drain connections and electrical connections stated in the instruction and installation manuals provided.
- 2. The ice production depends on the ambient and water temperatures. Refer to the instruction manual.
- △3. Use a coolimg tower for cooling water.
 △4. Product Code: F082—C121

F082-C123(SB Type)